



Free-standing Single Door Freezer

FNT4000



FEATURES

- 404 Liter
- LED lys
- Udvendigt display
- Easy Open Handle

Freezer Defense

Blomberg fryserer har en unik funksjon som kalles Freezer defense. Det betyr at fryseren fortsetter å fungere 100% selv om temperaturen kryper helt ned til minus 15 grader i tørre omgivelser.

Twist Ice maker

Med Blombergs smarte isbitkasse er isbitene klare etter tre enkle trinn: Fyll beholderen med vann, vri bryteren og trekk ut brettet for å hente de ferdige isbitene.

No Frost

Med denne teknologi oppbygges der ingen rim i fryseren, så du behøver aldri å afrime fryseren igen. Samt et lavt strømforbrug.

Udvendigt display


Det elegante elektroniske berøringspanelet på noen Blomberg modeller gjør det mulig å foreta presise temperaturinnstillinger uten å måtte åpne døren.

GENERAL

Type	Free-Standing
Total Volum	404 liters
Color	White
Cooling System Type	No Frost
Control	Electronic display on door
Control System	Electronic
Display	Yes
Display Type	7 Segment - LED
Light	LED on the Body Top Trim
Door Opening Direction	Right
Reversible Door	Yes
Open Door Alarm	Yes
Quick Freeze	Yes
Eco Mode	Yes
Freezer Defense	Yes
Ice Maker Type	Double Twist Ice Maker

PERFORMANCE AND TECHNICAL INFORMATION

Energy Efficiency Class	E
Noiselevel	38 dBA
Noiselevel Class	C
Climat Class	SN-T
Dimensions (HxWxD)	191.2 x 70 x 76.8 cm
Plug Type	European
Cable Lenght	1.95 m
Daily Freezing Capacity	19.0 kilograms
	291.59 kWh/annum
	R600a
	0.044

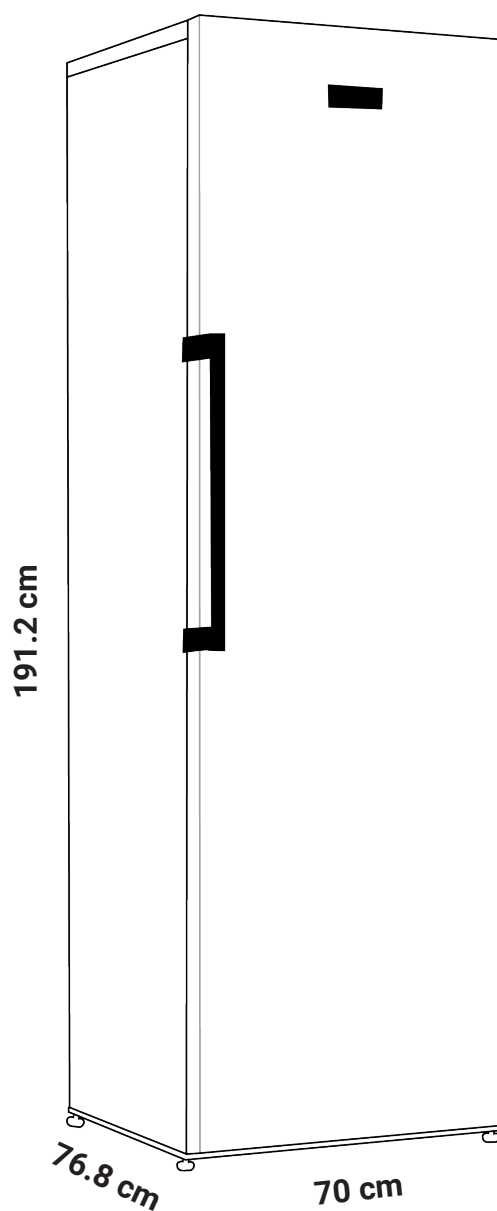

- Place the product on an even floor surface to prevent jolts.
- Install the product at least 30 cm away from heat sources such as hobs, heater cores and stoves and at least 5 cm away from electrical ovens.
- Product must not be subjected to direct sun light and kept in humid places.
- Appropriate air ventilation must be provided around your product in order to achieve an efficient operation. If the product is to be placed in a recess in the wall, pay attention to leave at least 5 cm distance with the ceiling and side walls.
- Your product requires adequate air circulation to function efficiently. If the product will be placed in an alcove, remember to leave at least 5 cm clearance between the product and the ceiling, rear wall and the side walls.
- If the product will be placed in an alcove, remember to leave at least 5 cm clearance between the product and the ceiling, rear wall and the side walls. Check if the rear wall clearance protection component is present at its location (if provided with the product). If the component is not available, or if it is lost or fallen, position the product so that at least 5 cm clearance shall be left between the rear surface of the product and the wall of the room. The clearance at the rear is important for efficient operation of the product.